

What to do if...
What to do if...



A tire punctures

P. 639 If you have a flat tire



The engine does not start

P. 647 If the engine will not start

P. 103 Engine immobilizer system

P. 657 If the battery is discharged



The shift lever cannot be moved out

P. 649 If the shift lever cannot be shifted from "P"



The engine coolant temperature gauge enters the red zone

P. 660 If your vehicle overheats



Steam can be seen coming from under the hood



The key is lost

P. 652 If you lose your keys



The battery runs out

P. 657 If the battery is discharged



The doors cannot be locked

P. 48 Doors




The horn begins to sound

P. 105 Alarm



The vehicle is stuck in mud or sand

P. 663 If the vehicle becomes stuck

 A warning light or indicator light comes on

P. 627 If a warning light turns on or a warning buzzer sounds...



nWarning lights



Brake system warning light (red indicator)

or



P. 627



Malfunction indicator lamp

or



P. 628



"ABS" warning light

or



P. 628



Driver's seat belt reminder light

P. 629



Front passenger's seat belt reminder light

P. 629



Brake system warning light (yellow indicator)

P. 628



Master warning light with warning message

P. 629



Low fuel level warning light

P. 629



Electric power steering warning light

P. 628



SRS warning light

P. 628



Pre-collision system warning light

P. 628



Open door warning light

P. 629



Tire pressure warning light

P. 629



Charging system warning light

P. 627